

Soldering Iron & Heat Gun & Torch

3in1

READ BEFORE USE

Manual & Instructions (Butane Not Included)

Refueling*

Make sure the Control Lever (B) is at "OFF" position before filling.* Turn the unit upside down & firmly push the butane can into the filling valve (A)

The Gas Container should be filled in seconds.* Please allow a few minutes after filling for the gas to stabilize.

Ignition - Soldering Iron

Turn on the fuel by moving the control lever(B) to the right.

Tip temperature adjust with gas adjust wheel (B) observing the (+ -)







The ignition button (C) with your thumb. Hear the sound of gas flowing and tip housing will glow orange within few sec.

Ignition - Heat Blower

Remove the soldering tip by simply unscrewing. The Catalytic Heat Chamber becomes a Heat Blower Tip (D)

Ignition - Torch

Remove the tip, unscrewing the knurled nut (E) and remove The Catalytic Heat Chamber to torch function (F).

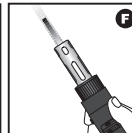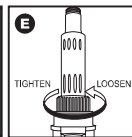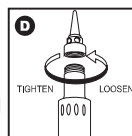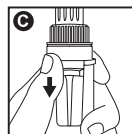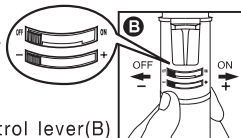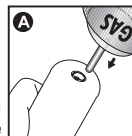

OPERATING

1. Ignite by pushing the Ignition Button (C).
2. Adjust the intensity of heat by moving the control lever (B)
3. To turn off: slide the Control Lever (B) all the way to the left.

WARNINGS



3-1

מלחם / בלוואר / להביר

יש לקרוא הוראות ואזהרות לפני שימוש
מילוי - במקום פתוח ומאוורר

1. הרחק כל חומר דליק, הרחק אנשים ילדים והרכב משקפי מגן.
2. לודא לפני מילוי- וסת עוצמה (שרטוט B) במצב OFF (סגור).
3. שימוש בגז בוטן איכותי ונקי למניעת נזק בלתי הפיך לכלי.
4. להפוך את כלי (A), להכניס את פיית מיכל הגז לשסתום וללחוץ על המיכל 3-4 שניות.
5. יש להמתין 5 דקות להתנדפות הגז הנותר באוויר לפני השימוש !!!

הפעלה

1. יש לקבוע את השימוש הרצוי לפני הפעלה כאשר הכלי קר (מלחם, להביר, בלוואר).
 - א. מצב מלחם: קיים.
 - ב. מצב בלוואר: יש לשחרר את ראש ההלחמה ע"י סיבוב (D).
 - ג. מצב להביר: יש להוציא את ראש הבלאור על ידי שחרור הברגת הבסיס (E+F).
2. העבר מצב וסת ON (B).
3. לחץ על לחצן ההצתה (C) וכונן את העוצמה הרצויה (B).

אזהרות

- הכלי מיועד לבעלי מקצוע בלבד! להרחיק מילדים, לאחסן במקום בטוח וקריר.
- אין לכוון את הכלי כלפי בני אדם וחיות.
- חל אסור מוחלט לתקן את הכלי- מסוכן ביותר.
- איסור מוחלט לנעת בחלקים המתכתיים (סכנת כווייה) בזמן השימוש וכ-30 דקות אחרי הפסקת פעילות הכלי.

אחריות: תקפה לכלי שלם -ללא שבר.
אין אחריות למצית, לסתימות עקב שימוש בגז לא איכותי.

SPECIFICATION

SWeight: 162g (no gas)
Fuel: Butane Gas Container Capacity: 15ml
Operating Time: 45-60 minutes
Size (L X W X O): 250 X 30 X 25mm Approximate
Temperature: 200-400°C (Soldering Iron)
Up to 450°C (Heat Gun)
Up to 1300°C (Torch)

